

SAFETY RECALL

Gerber® Instant™ Knife (Model Nos. 30-000435 & 31-001101)

The spring-assisted blade of the Instant Knife is designed to be opened with one hand using a thumb stud on the blade. In some Instant Knives, if the user opens the knife slowly with two hands, rather than with one hand using the thumb stud, the blade locking mechanism may not always properly engage. As a result of the lock not properly engaging, this potentially could result in the blade unexpectedly closing during use. This issue may pose a laceration hazard to the user.



If you have a Gerber Instant Knife, stop using it immediately and contact Gerber to receive instructions on how to return the Instant Knife for a free replacement. Gerber will provide you with instructions on how to return the product, along with a prepaid shipping container.

Call Gerber between 9 a.m. and 5 p.m. PT, Monday through Friday, at:

(877) 314-9130

or visit Gerber's website: www.gerbergear.com