

取扱説明書 Ver 1.00

LV-071TR **ワンアクションちゃぶ台竹M**

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。この製品は折り畳み式テーブルです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご 使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様も しくは弊社ユーザーサービスまでお問い合わせください。



▲ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

●テーブルの上に乳幼児や小さいお子様を寝かせたり、座らせたりするのは危険ですので絶対にしないでください。●このテーブルは仮設を目的とした簡易式のテーブルです。テーブ ル上に重量物を載せないでください。また、テーブルの上に座ったり、手をついて体重をかける行為はしないでください。破損の原因になります。●火や炎、燃焼器具から遠ざけて使用し てください。●テーブルの上に熱いものを直接毓せないでください。載せたものが滑り落ちて火傷の原因になります。

▲ 警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。

●物を載せたままテーブルを移動しないでください。ケガやテーブルを破損する原因になります。●凹凸の無い地盤のしっかりした場所でお使いください。不安定な場所での使用は転倒の原因になります。●機能を損なったり、強度が低下しますので改造は絶対に行わないでください。改造製品のアフターサービスはお受けできません。

▲ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

●本製品の天板には、ご使用状況や保管状態により反りや歪み、割れが発生する事があります。暖房の熱が直接伝わる場所や長時間直射日光に当たる場所、夏場の車内では保管しないでください。●雨天時に水滴の当たる場所に長時間放置したり、長時間水分と接触した場合、塗装の内部に水分が浸透し、シミや変色、反りや狂い、カビの発生原因になりますのでご注意ください。●可動部に異物や汚れが付着しないように注意してください。動作に支障をきたす原因になります。●テーブルの上で直接ものを切ったり、叩いたりは絶対にしないでください。破損の原因になります。●運搬時にぶつけたり、強い衝撃を与えると破損の原因になります。のでご注意ください。●天板をぶつけるなどして塗膜が損傷すると、水分を吸収しやすくなり、シミや変色、反りや狂い、カビの発生原因になりますのでご注意ください。●ご使用により天板表面が退色や変色する場合があります。また局所的に温度が上がると変色や退色が進行する場合があります。●本製品は天然の竹を加工、集成したもので、天板の場所や個体ごとに色の濃淡や模様などが異なります。●天板開閉の際には必ず天板を持って開閉操作を行ってください。●大板開閉の際には必ず天板を持って開閉操作を行ってください。●レックが掛かっていない状態で使用しますと、横方向からの力により転倒または、全体が閉じる方向に力が働きます。必ずロックがかかっている状態を確認してから使用してください。●開閉動作はゆっくり行ってください。勢いよく開閉すると、破損の原因になります。



メンテナンスについて

●軽い汚れや水分が本体に付着した場合は速やかに乾いた布で拭き取り、よく乾燥させてください。●塩分、調味料やその他薬品などが付着した場合は、固く絞った布でよく拭きとり、十分に乾 燥させてください。●使用後、保管する際には直射日光を避け、風通しのいい場所で保管してください。



MADE IN CHINA

2.保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。



Instruction Manual Ver 1.00

LV-071TR Single Action Round Table M

Thank you for purchasing this Snowpeak Product. This folding table is designed for use outdoors. Please read this instruction manual before using and keep this instruction manual for future reference. Please confirm all components and set up instruction before using. If you are not clear on any point, contact your local Snowpeak Dealer before using.







With the case covered, take the check tape out and hold the table top firmly placing legs downward,then open the table top to the direction of the picture.



Once the table top's two panels are set in flat, the panels fixed structurally. Please make sure that the panels are locked firmly. In addition, the lock will be engaged to place the leg flames pulling lightly to the direction as shown in the picture before setting.



Take out the carrying case, and ready to use the product.





Coverthe carrying case, everse the procedure for set-up, and close the table top panels slowly unlocking to the direction to the arrow as shown in above picture, then attach the check tape for storage.

Cleaning instruction

For frequent maintenance of Canvas seat, brush or Vacuum to remove dust from the creasing areas.
If the seat is wet, wipe it with dry cloth and dry it before using or storing.
Dry under shade and in a well ventilated area.
Not recommended for washing machine or dryer.

6. Damage by dirt and rust.

7. Damage by dismantling.

other similar incidents.

8. Deformation and failure of parts damaged by dropping or

10. Damage caused by improper use with other products.

9. Product failure due to wear and tear by user.

Warranty

Snow Peak guarantees its products against manufacturer defects. We have made every effort to ensure our products are free from any defect or flaws. In the rare event that you feel this product has a defect or needs repair, please contact Snow Peak customer service or go to your local Snow Peak dealer where you purchased this product. Snow Peak will not be able to replace this product in any damages occurred due to any of the following:

- 1. Damaged due to improper handling which is prohibited as shown in instructions.
- 2. Material quality has changed due to aging of product.
- 3. Damage by altering or careless handling.
- 4. Products failure due to user accidents.
- 5. Any damage except with product defect due to manufacturing.

Repair

For repairs, please contact the retailer where you purchased the product or Snow Peak user service. When you ask for repair, please make sure that the product is dry and clean. Please attach a memo or some kind of tag indicating the needed repair and also please write details of when and how the damage occurred. We set for shipping cost and repair fee for the repair as follows. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak. Outside warranty: Return shipping cost and repair fee will be covered by the user.

Snow Peak Inc. A Corporation of Japan

410 NW 14th Ave., Portland Oregon, 97209, USA TEL:+1-503-697-3330 FAX:+1-503-699-1396 www.snowpeak.com

Snow Peak Korea, Inc.

602GongHang-DaeRo, YangChen-Gu, Seoul, KOREA 158-807 Tel. +82-2-6203-1258 Fax. +82-2-6203-1959 www.snowpeak.co.kr MADE IN CHINA