

REI FOOTPRINT

CHRYSLIS

FOOTPRINT INSTRUCTIONS

1. Lay out the footprint, coated side up.
2. Pitch your tent (without the rainfly) and align the tent floor outline to match the orientation of the footprint: The color-coded webbing on the corner-tabs should match.
3. Insert tent-pole tips into the grommets on the footprint's corner tabs.
4. Attach the rainfly. When attaching rainfly grommets to the poles, place them last on the pole tips, underneath the footprint grommets. When finished, you will have 3 layers of grommets on the tips: tent floor corner tabs (top), footprint (middle) and rainfly (bottom).
5. Stake out your tent.

NOTE:

The footprint is designed to fit loosely to keep the tent floor taut.

MINIMALIST SHELTER INSTRUCTIONS

Want to travel ultralight? Use this footprint, your tent's rainfly and poles to create an ultralight tentless shelter.

- If you're new to pitching your tent, refer to its setup instructions.
- To pitch your minimalist shelter, perform the same setup, but omit the tent body and place pole tips into the footprint's corner grommets. Be sure to secure all rainfly rip-and-stick wraps around poles.
- Whenever you're sliding grommets onto pole tips, make sure the rainfly grommets are underneath the footprint grommets.
- When you're done with setup, readjust the rainfly tension. You can also reposition and stake out your minimalist shelter.

