

Readjust the locking strength of an external Power Lock II mechanism



1. Open the tab to loosen the Power Lock
2. Adjust the screw in the Power Lock mechanism with a screwdriver to the desired locking strength
3. Close the tab on the Power Lock to lock the pole section in place and test its locking strength