

# HAVEN

## HAVEN Lantern Manual

### General Product Description

HAVEN 10000 is a portable 3-in-1 solar-powered device combining:

- A collapsible silicone lantern
- A full panel flashlight
- A 10,000mAh rechargeable power bank

It is designed for everyday use, camping, travel, emergencies, and power outages.

#### Key features include:

- Lumens: Up to 1,200 lumens when lantern and flashlight are used together
- Run-time: Up to 120 hours at 30 lumens (low setting)
- Charging capabilities: 2 cycles of a current smartphone or 1 cycle of a current tablet
- Waterproof: IPX6 rating
- Solar + USB-C charging
- Collapsible & expandable
- Light modes: 8 Total (3 brightness levels + SOS for each of the lantern and flashlight)
- 4-LED battery indicator
- Durable silicone body
- Two adjustable handles
- Total of 50 LEDs

#### Package includes:

- HAVEN Lantern
- USB-C Cable

### Instructions for Use

#### Charging

##### USB-C Charging

- Open USB-C plug cover and use USB-C provided cable to plug one end into the charging port and the other end into any USB-C charger
- Full charge from empty typically takes about 7 hours

##### Solar Charging

- Place in direct sunlight; avoid shaded or indoor windows. For best results, angle towards sun and assume 1 hour of direct sun = 1 hour of charge
- Green indicator light will turn on when charging

##### Battery Indicator Level

- 1 light: low
- 2 lights: low-medium
- 3 lights: medium-high
- 4 lights: full

# HAVEN

## Operating Instructions

### Lantern

- Expand by pulling both ends apart
- Collapse by pressing the ends together
- Lantern modes: low, medium, high, SOS (button located next to solar panel; push Button 1X to cycle through modes)
- Flashlight modes: low, medium, high, SOS (Button located next to flashlight panel; Push Button 1X to cycle through modes)
- Press and hold either button for 3 seconds to turn off
- Both lantern and flashlight may be used together for maximum brightness

### Power Bank

- Connect a USB-C cable from HAVEN to your device
- Charging begins automatically

### Adjustable Straps

- Lift strap away from lantern to perpendicular position
- Holding firmly above the white side button, remove handle by gently pulling around button
- After hanging, re-attach strap to button

### Cleaning & Care

- Wipe with a soft, damp cloth
- Avoid harsh chemicals
- Keep USB-C port cover closed when not in use
- Store in a cool, dry place

## Safety Instructions

- Do not disassemble or puncture
- Do not submerge HAVEN; it is waterproof, but not submersible
- Always close the USB-C port cover before exposure to water
- Use only high-quality USB-C charging cables and reputable wall adapters
- Do not operate or charge the device if wet around the USB-C port
- Avoid excessive heat or leaving the lantern inside a hot vehicle
- Do not look directly at the LEDs on high brightness at close range
- Keep out of reach of unsupervised children
- For returns or warranty issues, email [contact@havenlantern.com](mailto:contact@havenlantern.com)

## Product Warranty

- HAVEN comes with a 2-year warranty against manufacturer defects
- Visit [havenlantern.com/policies/refund-policy](https://havenlantern.com/policies/refund-policy) for additional details