





REI CAMP DOME 4

SETUP INSTRUCTIONS

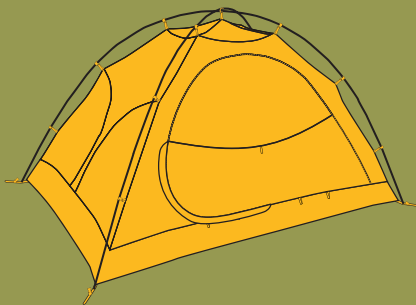


CHECK INSIDE THE TENT BAG FOR:

- Tent body and rainfly
- Pole-repair tube
- 2 poles & 1 rainfly pole
- Pole bag and stake bag
- 4 stakes
- 2 guylines with tighteners

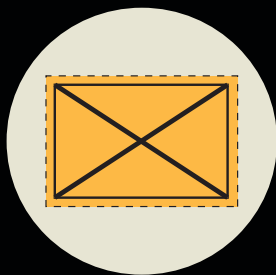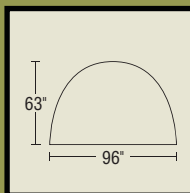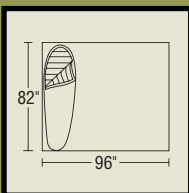


POLE ASSEMBLY

- Lay out the tent. (If it's windy, tautly stake floor to ground.)
- Assemble the shock-corded sections of the 2 long poles. Lay them in an "X" pattern on top of the tent.
- Raise tent frame by setting all pole tips into grommets on the 4 corner tabs.
- Attach the large clip on the tent's canopy over the pole intersection. Hook all smaller clips to the poles.
- If not already staked, you can move the tent to a preferred position, then stake it down.

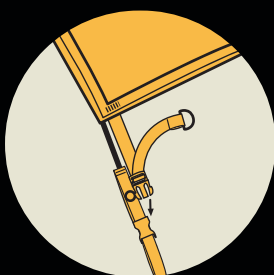

CORNER CONNECTION

- Lay out the rainfly upside down. Assemble the shorter rainfly pole. Slip each end of this pole into the 2 black slots along the rainfly's edge. Secure the pole's midpoint with the rip-and-stick wrap.
- Flip over the rainfly and position it with the pole in the center and REI logos on the sides. Secure the fly to poles using 4 rip-and-stick wraps (1 at each "leg") on the underside of the rainfly.
- Buckle the rainfly to the tent (see above) at all 4 corners. Tighten all buckles.

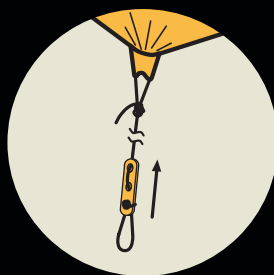

GUYLINE TIGHTENER

- To increase rainfly tension, tighten the straps that run through the buckles at the corner connections (shown above, center illustration).
- Using extra guylines in wind:
 - 1) Tie free end of guyline to a guyout point on the fly.
 - 2) Pull a loop of line out from the tightener.
 - 3) Stake down the loop and slide tightener toward the fly (see above). Additional stakes sold separately.

GET REPLACEMENT PARTS:

REI STORES • WWW.REI.COM • 1-800-426-4840

