

 
 
 
REI CHRYSALIS

SETUP INSTRUCTIONS



CHECK INSIDE THE TENT BAG FOR:

- Tent body and rainfly
- Pole-repair tube
- Twin-hub pole assembly
- Pole bag and stake bag
- 7 stakes
- 4 guylines with tighteners

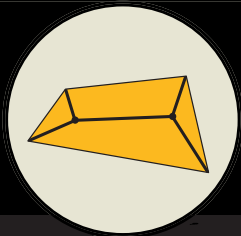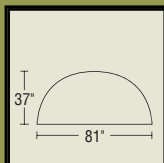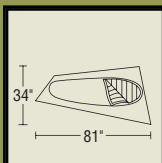

POLE ASSEMBLY

- Lay out the main tent body. If conditions are windy, stake down the corners.
- Unfold twin-hub pole assembly, making sure the open side of each hub is facing down.
- Orient poles so the longer legs are at the door end. Plug pole tips into corner-tab grommets.
- Starting at the ridge pole, attach all pole clips.
- If you didn't already do so, stake down the tent corners.



CORNER CONNECTION

- Place rainfly over tent, making sure the zippered vestibule is by the door. Corner-tab colors on fly and tent should match (black to black and orange to orange).
- Attach rip-and-stick wraps on the underside of the fly to each pole.
- Loosen buckles at all fly corners. Then slip each fly-tab under a tent-pole tip and press the tab's grommet onto the tip. Retighten buckles. (See above.)
- Stake vestibule loop down and pull cord through cleat until taut; then wedge the cord into the cleat's slot to "lock" into place. (See above, right.)



VESTIBULE CLEAT LOCK

- If the fly is too slack, retighten buckle straps and vestibule cleat lock. (See above center and above).
- For extra ventilation, prop open the fly's ceiling vent.
- Using guylines in wind: Tie free end of guyline to a guyout point on the fly; pull a loop of line out from the tightener; then stake down the loop and slide the tightener toward the fly.

3 WAYS TO GET REPLACEMENT PARTS:

REI STORES • WWW.REI.COM • 1-800-426-4840

