

PANNIER OWNER INFORMATION

WARNING: All panniers can adversely affect the way your bicycle handles. Be careful to avoid high speeds, fast cornering and expect longer stopping distances when riding with loaded panniers.


The Universal Rail attachment is designed to fit most front and rear bike racks. The reversible Hook inserts allow you to fit rack diameters ranging from 8-12mm. Before using your new panniers make sure all points of adjustment are properly adjusted and secure.

ADJUSTING THE HOOKS TO MATCH TUBING DIAMETER

First remove the Hooks from the rail by completely unthreading the two adjustment screws. Use a pen or screwdriver to remove the insert from each Hook. Position the inserts according to the diagram that matches the diameter of your rack tubing. Reattach the Hooks to the rail and check that the Hooks fit snugly onto your rack.

ADJUSTING THE PANNIER ATTACHMENTS FOR THE FIRST TIME

Loosen, but do not remove, the Hook adjustment screws to allow adjustment along the rail. Set the pannier onto the rack so the hooks engage the rack. Make sure to adjust the position of the panniers to allow adequate heel clearance when pedaling.

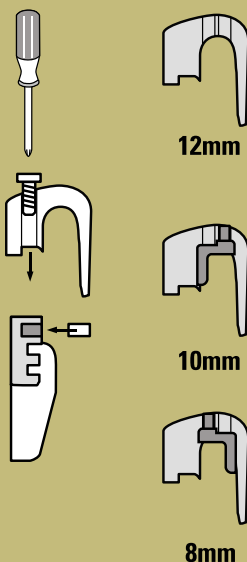

NOVARA

NEVER A BAD TIME TO RIDE



ADJUSTING THE LOWER CATCH

To accommodate different rack designs, the Lower Catch on the pannier is adjustable. Adjust the Lower Catch by loosening the adjustment screw located on the sliding catch portion of the assembly. Once loosened, the Lower Catch can slide to any position on the rail. Position the Lower Catch so that it hooks behind the rack tubing. With some racks it may be necessary to reverse the direction of the Lower Catch. To do this, slide the catch off the rail, reverse it, and slide it back on the rail.

Once you have found the right position tighten the adjustment screws found on the Hooks and Lower Catch so they remain in the correct position.

MOUNTING AND REMOVING THE PANNIERS

When mounting the panniers, set the Hook that is on the end nearest the Lower Catch opening onto the rack. Rotate the pannier into place so the other Hook and Lower Catch attach to the rack. Listen for an audible "CLICK" when the pannier Hooks are fully seated on the rack. Ensure that both silver ramps are fully extended under the rack tubing to prevent the pannier from becoming detached from the rack. If either ramp does not fully extend, readjustment is necessary for proper and safe operation.

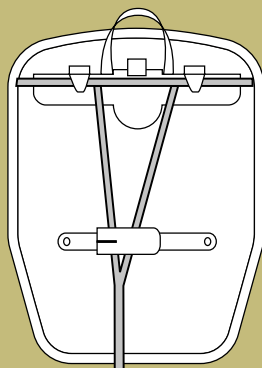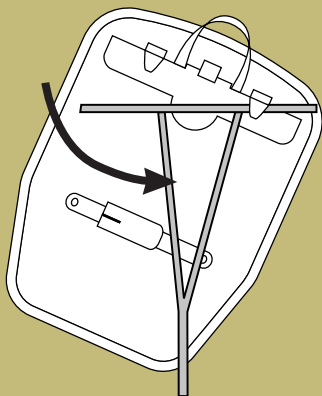

To release the pannier from the rack, press the blue button and rotate the pannier so the Lower Catch clears the rack. Pressing the blue button retracts the silver ramps allowing the attachment to clear the rack tubing.

CAUTION: Frequently check all adjustment screws to make sure that they remain tight; they may loosen over time and cause unwanted movement or detachment of the pannier.

NOVARA

WORLD HEADQUARTERS

1700 45TH STREET EAST, SUMNER WA 98390

NOVARA IS A REGISTERED TRADEMARK OF RECREATIONAL EQUIPMENT, INC.