

WELCOME TO HOTRONIC'S FOOT WARMERS FOR 2020/2021!

FOOT WARMER S4+

HOW FEET BECOME COLD

When colder outside temperatures are detected, the nervous system restricts blood flow to the extremities to maintain the body's core temperatures. The toes (and other extremities) quickly become uncomfortably cold.



HOTRONIC KEEPS FEET WARM

By providing a base level temperature at the toes, Hotronic's Heating Element blocks and neutralizes the penetrating cold keeping the blood circulation open while maintaining comfort and warmth in the feet.



Hotronic's S Series Foot Warmers offer three (3) base level settings for comfort and warmth maintenance while Boost Setting 4 offers an extra blast of heat when needed.

WHEREVER YOU GO

Whether planning a brief outing or a long term journey, Hotronic's Foot Warmer S4+ is easy to use in all types of footwear. Use while skiing, snowboarding, bicycling, horseback riding, fishing, and during other cold-temperature activities.



SKI TOUR



SKI



SKATE



RIDE



BIKE



CLIMB



TREK



SNOWBOARD

HOTRONIC'S S SERIES FOOT WARMERS

HOTRONIC's S Series Foot Warmers are the culmination of years of experience in research, development, and testing. With enhanced reliability and longevity, the S Series Foot Warmers maintain their focus on ensuring one's comfort and warmth during the coldest of conditions!



POWERFUL LONGEVITY

Hotronic's Foot Warmer S4+ offers more than ever before. With enhanced reliability and longevity, the Foot Warmer S4+ batteries maintain up to 55% of a full charge and 95% of their initial capacity after four years of non-use! Plus, an increase in capacity offers up to a combined 30% in higher average temperatures and longer durations on a single full charge, all when needed most, in the cold!!!



KEEPING FEET WARMER. LONGER.

WELCOME TO HOTRONIC'S FOOT WARMERS FOR 2020/2021!

FOOT WARMER S4+

POWER MULTIPLIED

With four (4) batteries in each Battery Pack, the Foot Warmer Power Plus S4+ is Hotronic's longest lasting, most powerful Foot Warmer. At the same time, Hotronic's NiMH batteries do not have a "memory effect" and do not require fully discharging before fully recharging. Hotronic's S Series Recharger and Heating Elements come standard with each Foot Warmer S4+.



SET FOR COMFORT & WARMTH

The Foot Warmer S4+ offers three base level settings for comfort and warmth maintenance. A fourth setting offers an extra blast of heat when needed. Press-and-release the Battery Pack's ON or OFF button to select the desired setting. Easy to read LED lights indicate the setting selected and when the power is on or off.

TEMPERATURE & DURATION CHART			
SETTING	DURATION RANGE	APPROX AVG TEMP RANGE	
1	16.5 - 21 h	29° - 37° C	84° - 98° F
2	7 - 10.5 h	42° - 49° C	107° - 121° F
3	5 - 7.5 h	50° - 59° C	122° - 138° F
4	2.5 - 4.5 h	70° - 78° C	158° - 173° F

Based on Battery Pack in ambient temperature of -22° to -15° C (-9° to +4° F)
Based on Heating Element in ambient temperature of 20° to 26° C (68° to 79° F)
Boost Setting 4 auto-resets to Setting 3 within 3 minutes. Total duration in chart is for information only.

AN ELEMENT OF HEAT

By blocking and neutralizing the penetrating cold, Hotronic's Heating Element keeps the blood circulation open while maintaining comfort and warmth in the feet. The Heating Element's large oval shape and self-adhesive backing provide effective anatomical coverage of the toes and easily installs in Hotronic's Heat Ready Insoles or on insoles of one's own choice.



A SMARTER WAY TO RECHARGE

Wherever one goes worldwide, Hotronic's advanced global charging technology senses when the batteries are charged and protects them from overcharging damage by switching to trickle current recharging. Compatible with all S, e, and m Series Battery Packs, the Recharger's LEDs indicate recharging mode and battery charge status.



KEEPING FEET WARMER. LONGER.