


simple


open. adjust. go paddle.

360° offset adjustment

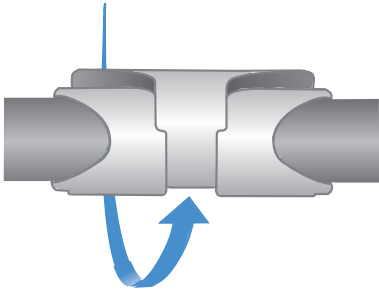


step1

release the 360 clamp.

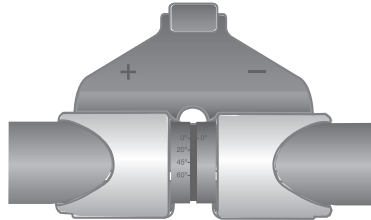

step2

twist paddle to desired offset.

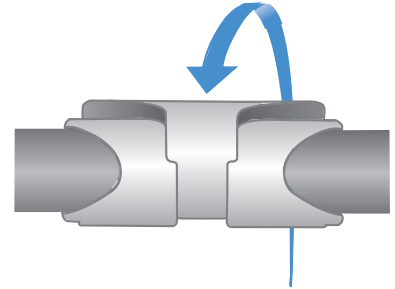

step3

close the 360 clamp.